

Códigos de Falla Canter

TROUBLESHOOTING

3. Inspections Based on Diagnosis Codes

3.1 Diagnosis code list

- Diagnosis codes shown by the Multi-Use Tester and those indicated by flashing of the warning lamp are different.
- The Multi-Use Tester is capable of showing more detailed diagnosis codes.

Code	Message	Flashes	Remarks
P0107	Atmospheric Pressure Sensor	19	
P0108	Atmospheric Pressure Sensor	19	
P0112	INT Air Temp. SNSR (Low)	44	
P0113	INT Air Temp. SNSR (High)	44	
P0117	Water Temp SNSR (Low)	21	
P0118	Water Temp SNSR (High)	21	
P0121	Accel Pedal Check (Plausibility)	58	
P0122	Accel Pedal Sensor 1	24	
P0123	Accel Pedal Sensor 1	24	
P0182	Fuel Temp Sensor (Inlet) Low	41	
P0183	Fuel Temp Sensor (Inlet) High	41	
P0192	CRS Pressure SNSR (Low)	11	
P0193	CRS Pressure SNSR (High)	11	
P0200	Injector Circuit 1	82	
P0201	Injector MV/Cylinder 1 (Load)	37	
P0202	Injector MV/Cylinder 2 (Load)	38	
P0203	Injector MV/Cylinder 3 (Load)	39	
P0204	Injector MV/Cylinder 4 (Load)	08	
P0219	Engine Overrunning	07	
P0222	Accel Pedal Sensor 2	16	
P0223	Accel Pedal Sensor 2	16	
P0234	Over Boost	54	
P0237	Boost Press SNSR (Low)	32	
P0238	Boost Press SNSR (High)	32	
P0251	Common Rail Pressure Defect	36	
P0253	Common Rail Pressure Defect	22	
P0254	Common Rail Pressure Defect	23	
P0335	Engine Revolution SNSR	15	
P0340	Camshaft Position SNSR	12	
P0380	Relay for Glow Relay	26	Gr54
P0381	Glow Lamp	89	Gr54
P0403	EGR 1 (Actuator Circuit)	67	Gr17
P0500	Vehicle Speed Sensor	25	

Code	Message	Flashes	Remarks
P0506	Idle Volume	31	
P0507	Idle Volume	31	
P0510	Accel SW	65	
P0560	MV Supply Voltage	79	
P0605	ECU System (Hardware)	33	
P0615	Starter Safety Relay (Over Load)	48	Gr54
P0616	Starter Safety Relay (Low)	48	Gr54
P0617	Starter Safety Relay (High)	48	Gr54
P1121	Intake Throttle 1	28	Gr17
P1171	Q Adjustment Resister (Low)	34	
P1172	Q Adjustment Resister (High)	34	
P1200	Injector Circuit 2	82	
P1251	Common Rail Pressure MV 1	63	
P1255	Common Rail Pressure MV 1	63	
P1256	Common Rail Pressure MV 1	63	
P1335	Revolution & Position Sensor	14	
P1460	Auxiliary Brake MV 1	93	
P1462	Auxiliary Brake MV 1	93	
P1463	Auxiliary Brake MV 1	93	
P1562	Sensor Supply Voltage 1	81	
P1563	Sensor Supply Voltage 1	81	
P1567	Sensor Supply Voltage 2	81	
P1568	Sensor Supply Voltage 2	81	
P1572	Sensor Supply Voltage 3	81	
P1573	Sensor Supply Voltage 3	81	
P1577	Segment Sensor Supply Voltage	81	
P1578	Segment Sensor Supply Voltage	81	
P1605	ECU System (EEPROM)	33	
P1606	ECU System (Software)	33	
P1625	EDU Relay	84	Gr17
P1630	CAN (EGR)	95	Gr17
P1635	CAN (Intake Throttle)	95	Gr17
P1700	Torque Cut SW	86	