

# Códigos de Falla Fuso FK

## 3. Inspection Based on Diagnosis Codes

### 3.1 Diagnosis code list

- Diagnosis codes shown by the Multi-Use Tester and those indicated by flashing of warning lamp are different.
- The Multi-Use Tester is capable of showing more detailed diagnosis codes.

Code	Message	Warning lamp indication			Remarks
		Flashes	Red	Orange	
P0087	CRS (Too Low)	11	-	○	
P0088	CRS (Too High)	11	-	○	
P0107	Atmospheric Pressure Sensor	19	-	○	
P0108	Atmospheric Pressure Sensor	19	-	○	
P0112	INT Air Temp SNSR (Low)	44	-	○	
P0113	INT Air Temp SNSR (High)	44	-	○	
P0117	Water Temp SNSR (Low)	21	-	○	
P0118	Water Temp SNSR (High)	21	-	○	
P0121	Accel Pedal Check (Plausibility)	58	-	○	
P0122	Accel Pedal Sensor 1 Low	24	-	○	
P0123	Accel Pedal Sensor 1 High	24	-	○	
P0182	Fuel Temp Sensor (inlet) Low	41	-	○	
P0183	Fuel Temp Sensor (inlet) High	41	-	○	
P0187	Fuel Temp Sensor (outlet) Low	56	-	○	
P0188	Fuel Temp Sensor (outlet) High	56	-	○	
P0192	CRS Pressure SNSR (Low)	11	-	○	
P0193	CRS Pressure SNSR (High)	11	-	○	
P0200	Injector Circuit 1	82	-	○	
P0201	Injector MV-Cylinder 1 (Load)	37	-	○	
P0202	Injector MV-Cylinder 2 (Load)	38	-	○	
P0203	Injector MV-Cylinder 3 (Load)	39	-	○	
P0204	Injector MV-Cylinder 4 (Load)	08	-	○	
P0205	Injector MV-Cylinder 5 (Load)	46	-	○	
P0206	Injector MV-Cylinder 6 (Load)	47	-	○	
P0219	Engine Overrunning	07	○	-	
P0222	Accel Pedal Sensor 2 Low	16	-	○	
P0223	Accel Pedal Sensor 2 High	16	-	○	
P0234	Over Boost	54	-	○	
P0237	Boost Press SNSR (Low)	32	-	○	
P0238	Boost Press SNSR (High)	32	-	○	
P0252	Common Rail Pressure Defect	36	-	○	
P0253	Common Rail Pressure Defect	22	○	-	
P0254	Common Rail Pressure Defect	23	-	○	
P0255	Common Rail Pressure MV 1	23	-	○	
P0256	Common Rail Pressure High (Pump)	23	-	○	
P0257	Common Rail Pressure Low (Pump)	23	-	○	
P0335	Engine Revolution SNSR	15	-	○	
P0339	Engine Revolution SNSR (Plausl)	14	-	○	
P0340	Camshaft Position SNSR	12	-	○	
P0380	Relay for Glow Relay	26	-	-	
P0500	Vehicle Speed Sensor	25	-	○	
P0506	Idle Volume Low	31	-	-	
P0507	Idle Volume High	31	-	-	
P0512	Starter SW	-	-	-	

## TROUBLESHOOTING <DIAGNOSIS USING Multi-Use Tester>

Code	Message	Warning lamp indication			Remarks
		Flashes	Red	Orange	
P0605	ECU System (Hardware)	-	O	-	
P0611	No adjustment data of injector	99	-	O	
P0616	Starter Safety Relay (Low)	48	-	O	Gr54
P0617	Starter Safety Relay (High)	48	-	O	Gr54
P062B	Abnormal adjustment data of injection	99	-	O	
P062F	ECU System (EEPROM)	33	-	O	
P1170	Abnormal adjustment data of Q	99	-	O	
P1176	PTO Adjustment Resistor (Low)	62	-	O	
P1177	PTO Adjustment Resistor (High)	62	-	O	
P1200	Injector Circuit 2	82	-	O	
P1210	Injector Circuit 3	82	O	O	
P1240	Flow Limiter - Cylinder 1	71	-	-	
P1241	Flow Limiter - Cylinder 2	72	-	-	
P1242	Flow Limiter - Cylinder 3	73	-	-	
P1243	Flow Limiter - Cylinder 4	74	-	-	
P1244	Flow Limiter - Cylinder 5	75	-	-	
P1245	Flow Limiter - Cylinder 6	76	-	-	
P1255	Common Rail Pressure M/V 1	63	-	O	
P1256	Common Rail Pressure M/V 1	63	-	O	
P1257	Common Rail Pressure M/V 1	63	-	O	
P1462	Auxiliary Brake M/V 1 (Part name: Exhaust shutter 3-way magnetic valve)	93	-	O	
P1463	Auxiliary Brake M/V 1 (Part name: Exhaust shutter 3-way magnetic valve)	93	-	O	
P1562	Sensor Supply Voltage 1	81	-	O	
P1563	Sensor Supply Voltage 1	81	-	O	
P1567	Sensor Supply Voltage 2	81	-	O	
P1568	Sensor Supply Voltage 2	81	-	O	
P1605	ECU System (EEPROM)	33	O	-	